


Please ensure that all components listed below are accounted for before beginning installation:

- |  |   |  |
|--|---|--|
| <p><b>Exhaust Component</b></p> <ul style="list-style-type: none"> <li>o (2) Cast Cones</li> <li>o (1) Center X-Pipe Section</li> <li>o (1) Driver Side Muffler Inlet</li> <li>o (1) Passenger Side Muffler Inlet</li> </ul> | <p><b>Hardware/Clamps</b></p> <ul style="list-style-type: none"> <li>o (2) M8 Washers</li> <li>o (3) M8 x 20MM Bolts</li> <li>o (4) M8 Large Washers</li> <li>o (3) M8 Locking Nuts</li> <li>o (2) 3.0" Accuseal Clamps</li> <li>o (2) 7" V- Band Clamps</li> <li>o (2) Mikalor 85-91 Clamp</li> <li>o (2) 3" Torca Clamps</li> </ul> | <p><b>Valve</b></p> <ul style="list-style-type: none"> <li>o (2) Valve Delete Modules</li> </ul> <p style="text-align: center;"><b>Tips</b></p> <ul style="list-style-type: none"> <li>o (1) GT3 Tip Plate</li> <li>o (1) GT3 Tip Plate Gasket</li> <li>o (2) GT3 Tips</li> <li>o (2) Swivel Seal 65 Clamps</li> </ul> |
|--|---|--|

Packing Sign Off \_\_\_\_\_

Shipped on \_\_\_\_ / \_\_\_\_ / \_\_\_\_

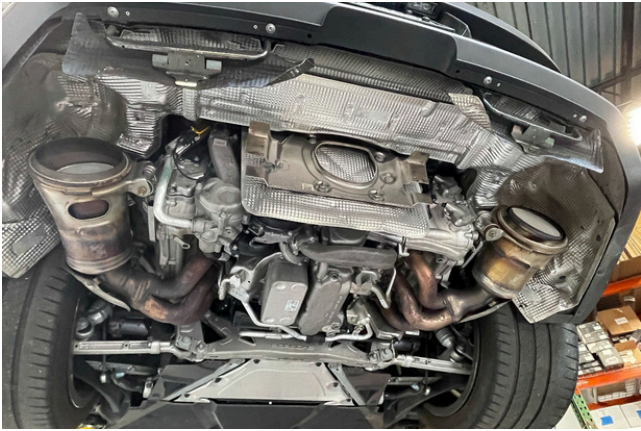

**Step 1:** Drop factory exhaust from car, remove rear system and reinstall headers.

**Step 2:** Install valve delete modules.




**Step 3:** Lift center muffler bypass into place on transmission bracket, aligning band clamps facing outward for ease of access. Leave clamps loose to ensure adjustability until fastening at a later step.

**Step 4:** Assemble transition cone with connecting tube, loosely secured with AccuSeal clamp.



**Step 5:** Position connecting tube to meet center muffle bypass, loosely install Torca clamp, then rotate transition cone upward to meet factory cat and secure with V-band clamp.

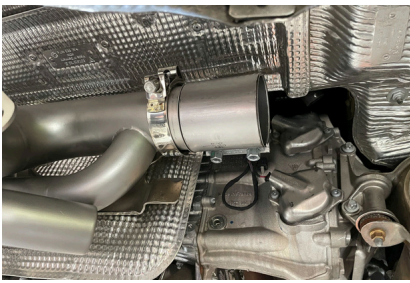

Step 6: Repeat previous step on opposite side.





Step 7: Ensure proper alignments and fittings before securing all component fasteners.



Step 8: Tighten the V-band clamp that secures transition cone to factory cats. Repeat for other side. This should be the first clamp/seal to fasten securely.



Step 9: Tighten the band clamps that secure the center muffler bypass to the transmission bracket.

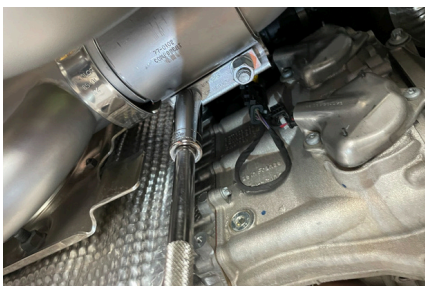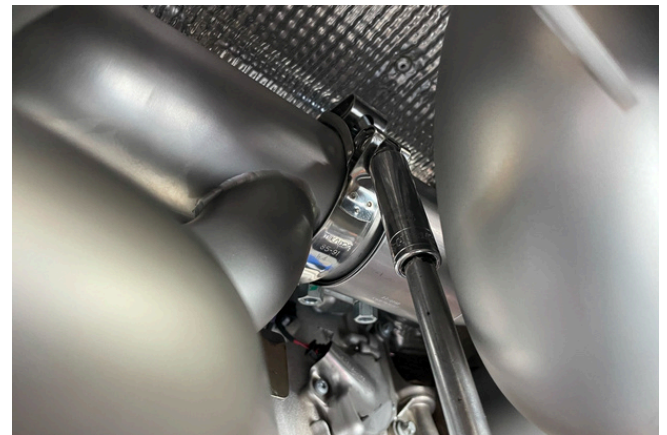

Step 10: Tighten the Torca clamp that secures connecting tube and center muffler bypass. Repeat for other side.



Step 11: Tighten the AccuSeal clamp that secures transition cone and connecting tube. Repeat for other side.



Step 12: Ready tip plate gasket for installation onto rear of center muffler bypass.




Step 13: Tighten center 13mm bolt, and side 13mm bolts with larger washers.



Step 14: Install tips loosely and adjust to fit desired position, then secure BEFORE replacing lower valance. Tips can then NOT be adjusted without removing the valance again.



You have now successfully completed the installation of your new SOUL exhaust components! Thank you for your business and if you have any questions during/after the installation please do not hesitate to call or email at the details below.

 You may notice smoke and fumes coming from the system upon first starting up the vehicle. This is due to oils used in manufacturing and is not a problem. The smell will dissipate in a short period of time after the exhaust has reached normal operating temperature.

**SOUL PERFORMANCE PRODUCTS**  
2300 Maryland Road  
Willow Grove, PA 19090  
(267) 818-3201  
customerservice@soulpp.com