

Disclaimer: This installation guide is intended to clarify the install of your new Soul Performance Products exhaust. Please take proper precautions and safety measures when working on your vehicle and perform this work at your own risk



Please ensure that all components listed below are accounted for before beginning installation:

Exhaust Hardware Included:

- (2) Mufflers
- (2) M8 x 140mm Bolts
- (2) M8 X 70mm Bolts
- (8) Washers
- (4) Lock Nuts
- (2) Vacuum Line Shielding
- (1) Valve Controller Kit

Valve Controller Kit Includes:

- (2) Remote Valve Key Fobs
- (2) Bags of Vacuum Hose
- (1) Bag of T-fittings and connectors
- (10) Black Zip Ties
- (1) Pig Tail Connector
- (1) Valve Control Box

Packing Sign Off _____

Shipped on ____ / ____ / ____



Step 1: With the rear of the vehicle raised and supported safely, locate the 13mm exhaust tip mounting bolts and loosen. Slide the exhaust tips off of the vehicle.



Step 2: Loosen 13mm sliding exhaust clamp bolts.



Step 3: Slide clamps off the mufflers and onto the catalytic converter sections.



Step 4: Remove 10mm bolt from bumper support rod.



Step 5: Remove T30 bolt from other side of the bumper support rod.



Step 6: Remove 3 x 13mm muffler support bracket nuts.



Step 7: Remove the OEM mufflers from the vehicle.



Step 8: Remove stock muffler brackets from the OEM mufflers.



Step 9: With included new hardware attach muffler bracket onto SOUL mufflers.



Step 10: Install new mufflers onto the vehicle.



Step 11: Reinstall sliding OEM clamps but do NOT tighten yet.



Step 12: Tighten new muffler bracket nuts.



Step 13: Tighten exhaust clamps.



Step 14: Reinstall the bumper support rod.



Step 15: Align exhaust tips and tighten.



Step 16: Attach vacuum lines and affix heat protection film around areas closest to exhaust piping.


VALVE CONTROLLER INSTALLATION



Step 17: Remove airbox completely to gain better access to engine bay.




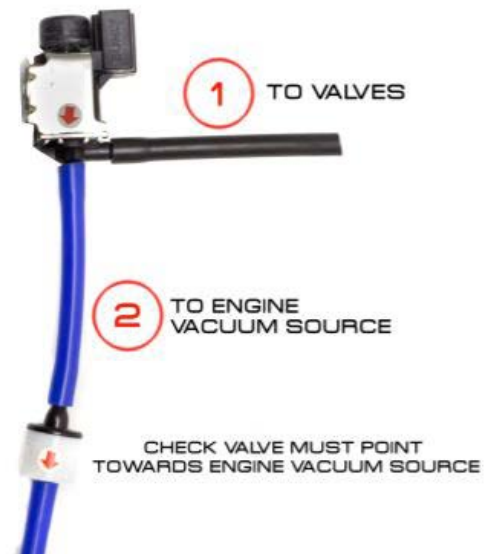
Step 18: Add included T in-line with evap purge solenoid hose

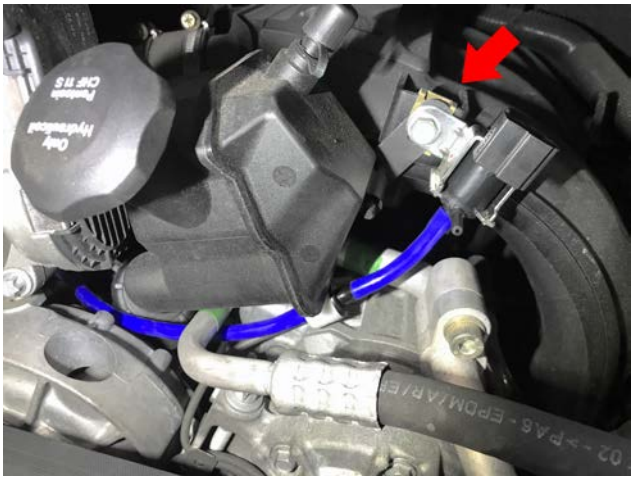

Step 19: Mount valve controller solenoid on power steering bracket.

Step 20: Add check valve to vacuum line and attach to mounted solenoid.

 Make sure check valve is pointing towards the engine and not the solenoid.



Step 21: Run vacuum line from T to valve controller solenoid.



Step 22: Located solenoid between between driver side intake runners




Step 23: Pull 12V key hot power from this solenoid.



Step 24: Add included eyelet to ground wire and ground to the first runner.



Step 25: Mount control unit as seen below on drivers side area of the vehicle.

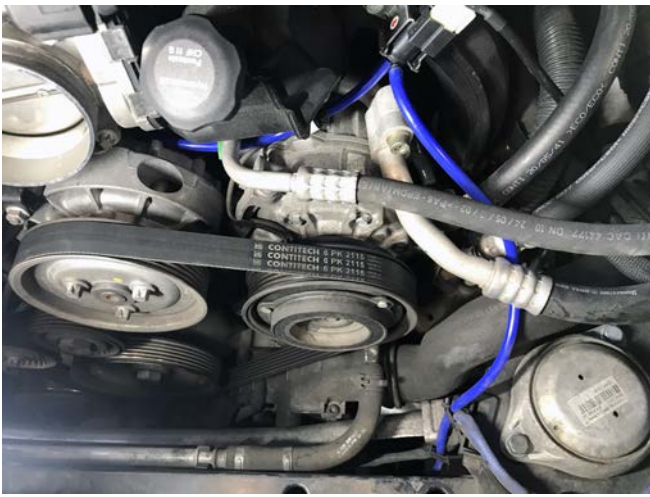

Step 26: Run vacuum line down to exhaust valves, use included T to split the line into one line for each valve.



Step 27: Attach vacuum lines and affix included heat shield around areas closest to exhaust piping. Reinstall factory airbox and test valve functionality.

You have now successfully completed the installation of your new Soul Performance Products exhaust components! Thank you for your business and if you have any questions during/after the installation please do not hesitate to call or email at the details below.

⚠ You may find that after your first full heat cycle of the exhaust that you need to re-adjust the tip placement to your liking. Additionally, the tone and sound of your exhaust will likely change as the mufflers get broken in, roughly a thousand miles or so.

⚠ You may notice smoke and fumes coming from the system upon first starting up the vehicle. This is due to oils used in manufacturing and is not a problem. The smell will dissipate in a short period of time after the exhaust has reached normal operating temperature.

SOUL PERFORMANCE PRODUCTS

2300 Maryland Road | Suite B
Willow Grove, PA 19090
(267) 818-3201 | Office
customerservice@soulpp.com

SOUL
PERFORMANCE PRODUCTS