


INSTALL GUIDE

992.2 Turbo S

Performance Exhaust System

SOUL
PERFORMANCE PRODUCTS

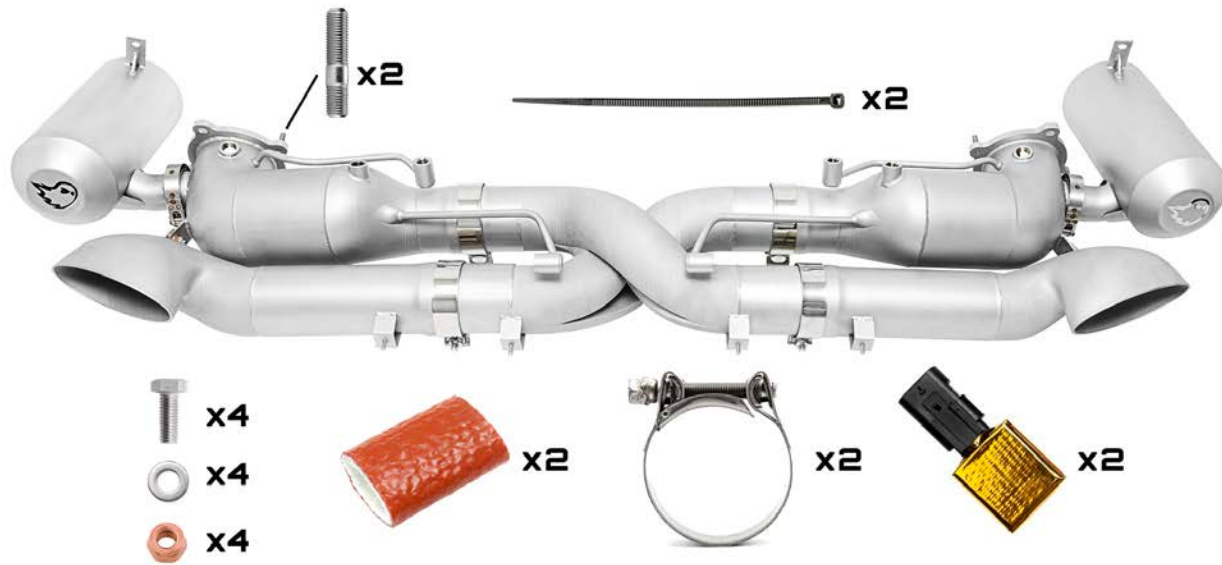

Please ensure that all components listed below are accounted for before beginning installation:

INCLUDED HARDWARE

- (1) XY Pipe Section
- (1) Left Cat Section
- (1) Right Cat Section
- (1) Left Tip Outlet Section
- (1) Right Tip Outlet Section
- (1) Left Helmholtz Resonator
- (1) Right Helmholtz Resonator
- (2) Valve Delete Modules
- (2) Long Zip Ties
- (4) 3.5" Accuseal Clamps
- (2) Mikalor 91/97 Supra Clamps
- (2) 2" V-Band Clamps
- (2) 2.5" Silicone Insulator Pieces
- (4) M8 x 20mm Bolts
- (4) M8 Flat Washers
- (4) M8 Lock Nuts
- (2) M8 Studs

Packing Sign Off _____


Shipped on ____/____/____

Step 1: Remove the factory bumper, shielding, and all exhaust components. Attach the included valve delete modules to the factory valve wiring harness and zip tie them out of the way. We recommend locating them as shown.





Step 2: Install left side cat section onto car loosely with OEM 12mm nuts and included 8mm stud in location as shown below.

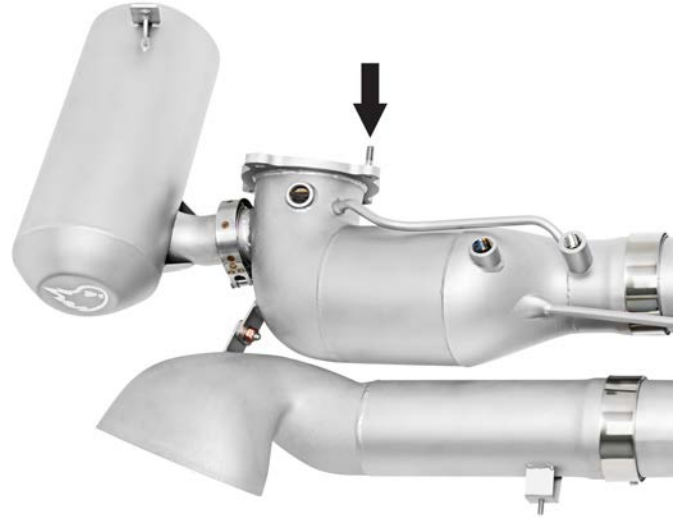

Step 3: Install center XY pipe and passenger side section at the same time.



Step 4: Install and tighten GPF lines, be careful not to strip the threads.



Step 5: Tighten hardware on turbo to downpipe connections. Try to make sure exhaust is centered in slots.



Step 6: Reinstall heat shields onto cat section area and then install o2 sensors through shields. Front O2 sensors (closest to turbo) are blue wire. Rear o2 sensors are black.



Step 7: Loosely install tip sections and hardware. *You will need to potentially make some adjustments later.*



Step 8: Install anti-drone canisters on both sides. (13mm nut / 11mm vband nut)



Step 9: Place remaining heat shields back on car.



Step 10: Insert insulating material on both sides of the exhaust in between exhaust and mounting brackets. Install Mikalor clamps and tighten down to decrease vibrations from exhaust in car.



Step 11: Reinstall bumper and all hardware. Line up tips to be centered, then tighten entire exhaust.

Thank you for your business. If you have any questions during / after the installation please do not hesitate to call or email at the details below.



2300 Maryland Road
Willow Grove, PA 19090
(267) 818-3201
support@soulpp.com