

INSTALL GUIDE

992.2 Turbo S

Vent To Atmosphere Adapters

SOUL
PERFORMANCE PRODUCTS



Please ensure that all components listed below are accounted for before beginning installation:


INCLUDED HARDWARE

- (1) Left Side VTA Adapter (Cup, Hose, Oetiker Clamp)
- (1) Right Side VTA Adapter (Cup, Hose, Oetiker Clamp)
- (2) TPU Caps
- (4) Oetiker Clamps (16704169)

Packing Sign Off _____

Shipped on ____ / ____ / ____

Step 1: To gain access, the rear bumper will need to be removed. Depending on exhaust configuration and skill level, side mufflers may need to be removed as well. Start by removing both clamps from the factory recirculation tubes on both sides of the vehicle and remove them.

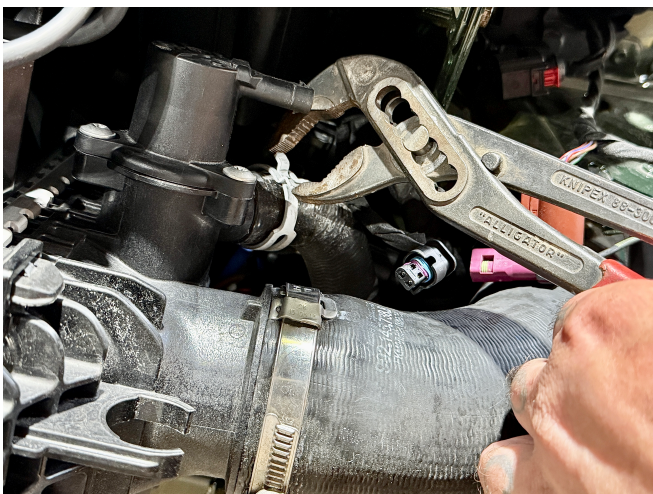



Step 2: Place cap over vent return port of factory intake tube on both sides of vehicle. Tighten oetiker clamps - double check to ensure they are on securely.

Step 3: Install VTA adapter onto both sides of the recirc valve ports as shown to allow for proper clearance of the trumpets.



LEFT SIDE



RIGHT SIDE

Thank you for your business. If you have any questions during / after the installation please do not hesitate to call or email at the details below.



2300 Maryland Road
Willow Grove, PA 19090
(267) 818-3201
support@soulpp.com