

Installation Guide

Porsche 718 GT4 / GTS / Spyder
Over Axle Pipes

SOUL
PERFORMANCE PRODUCTS

Disclaimer: This installation guide is intended to clarify the install of your new SOUL exhaust. **Please read this guide in full before beginning installation.** Do take proper precautions and safety measures when working on your vehicle and perform this work at your own risk.



Please ensure that all components listed below are accounted for before beginning installation:

EXHAUST COMPONENTS

- (1) Driver Side Over Axle Pipe
- (1) Passenger Side Over Axle Pipe

HARDWARE


- (16) M8 x 1.25 x 30mm Bolts (13mm)
- (32) M8 Washers
- (16) M8 Locking Nuts (13mm)

Packing Sign Off _____

Shipped on ____/____/____



Step 1: Raise vehicle and remove rear wheels to gain access to the over axle pipes.

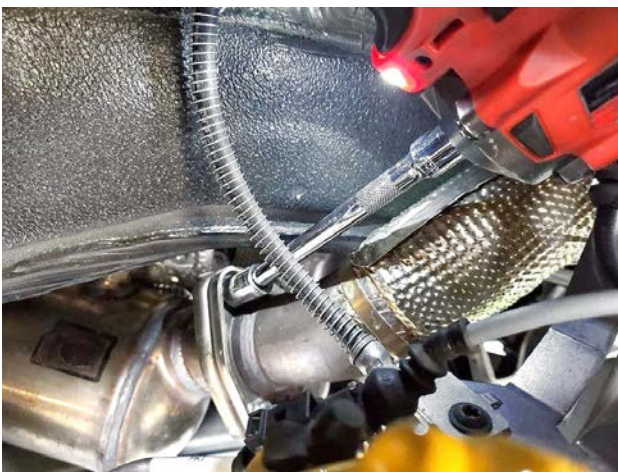

Step 2: Loosen header to over axle pipe hardware and remove nuts.



Step 3: In order to remove the over axle pipes without removing the rear exhaust, the studs must be removed from the over axle pipes. Use the double nut method to back out the factory studs and nuts.

Step 4: Carefully remove factory over axle pipes from the car.

Step 5: Install SOUL Over Axle Pipes with included 13mm hardware on the rear exhaust side and / or reuse factory hardware on the header side.



You have now successfully completed the installation of your new Soul Performance Products exhaust components! Thank you for your business and if you have any questions during/after the installation please do not hesitate to call or email at the details below.

 You may notice smoke and fumes coming from the system upon first starting up the vehicle. This is due to oils used in manufacturing and is not a problem. The smell will dissipate in a short period of time after the exhaust has reached normal operating temperature.

SOUL PERFORMANCE PRODUCTS

2300 Maryland Road
Willow Grove, PA 19090
(267) 818-3201
customerservice@soulpp.com